


## The Monitor won't come on

- If the rest of the system works (the yellow light comes on and: after 1 minute: you can turn on Caps Lock Light on keyboard) but you do not get an image on the screen there could be a problem with the monitor. Make sure 12V cable from CRT, is attached to CN10 on connect card.

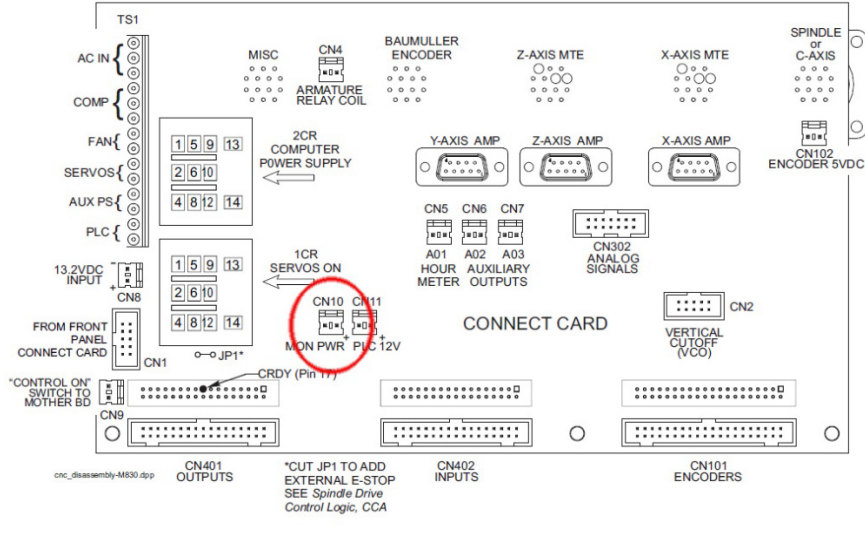

**CNC Front-Panel Connect Card**

- If the Caps Lock Light won't light: the computer is probably not booting up.